



(Version A)

**Dual Voltage Six Wire with Thermal Protection  
Wiring Instructions**

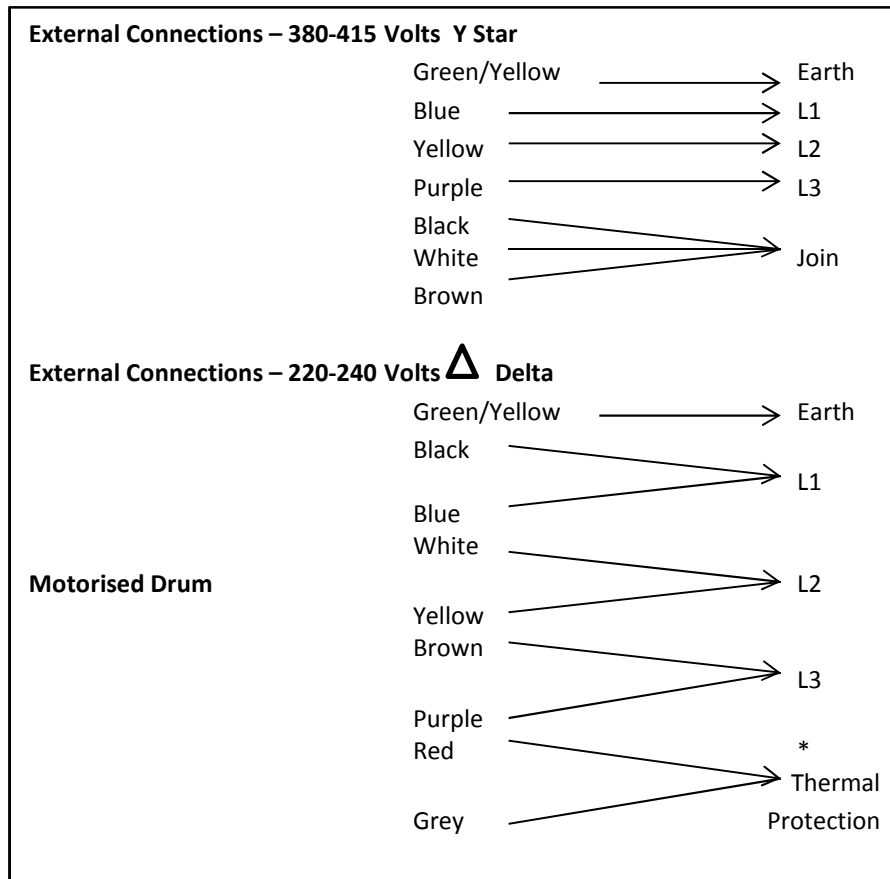

(Version B)

**Dual Voltage Six Wire with Thermal Protection  
Wiring Instructions**

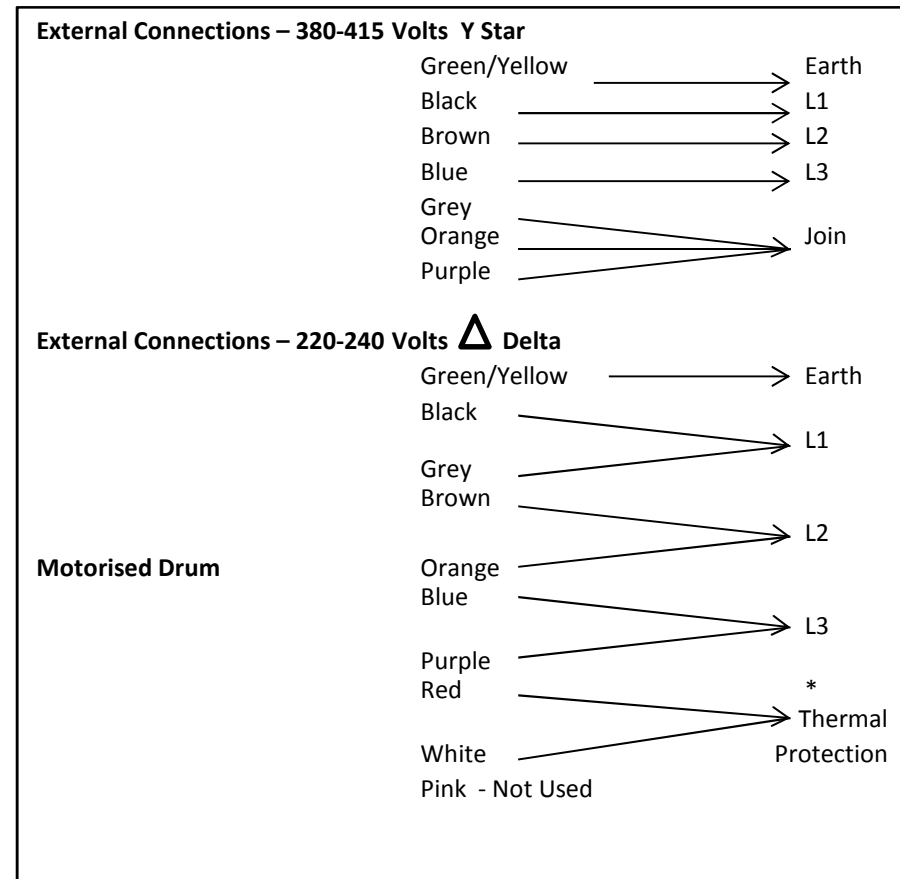

**IMPORTANT**

\*\*\*\*\*

**Unit must not be run without a belt or some other form of heat transfer system. Heat generated by the motor must be dissipated otherwise irreversible damage may occur to transmission system**

**\* Thermal connector fitted as standard, they must be connected to validate warranty**